


A		28
B		04
C		26
D		28
E		01
F	Cola/Glue	01
G		01
H		74
J		04
K		06
L		06
M		06
N		03
P		04








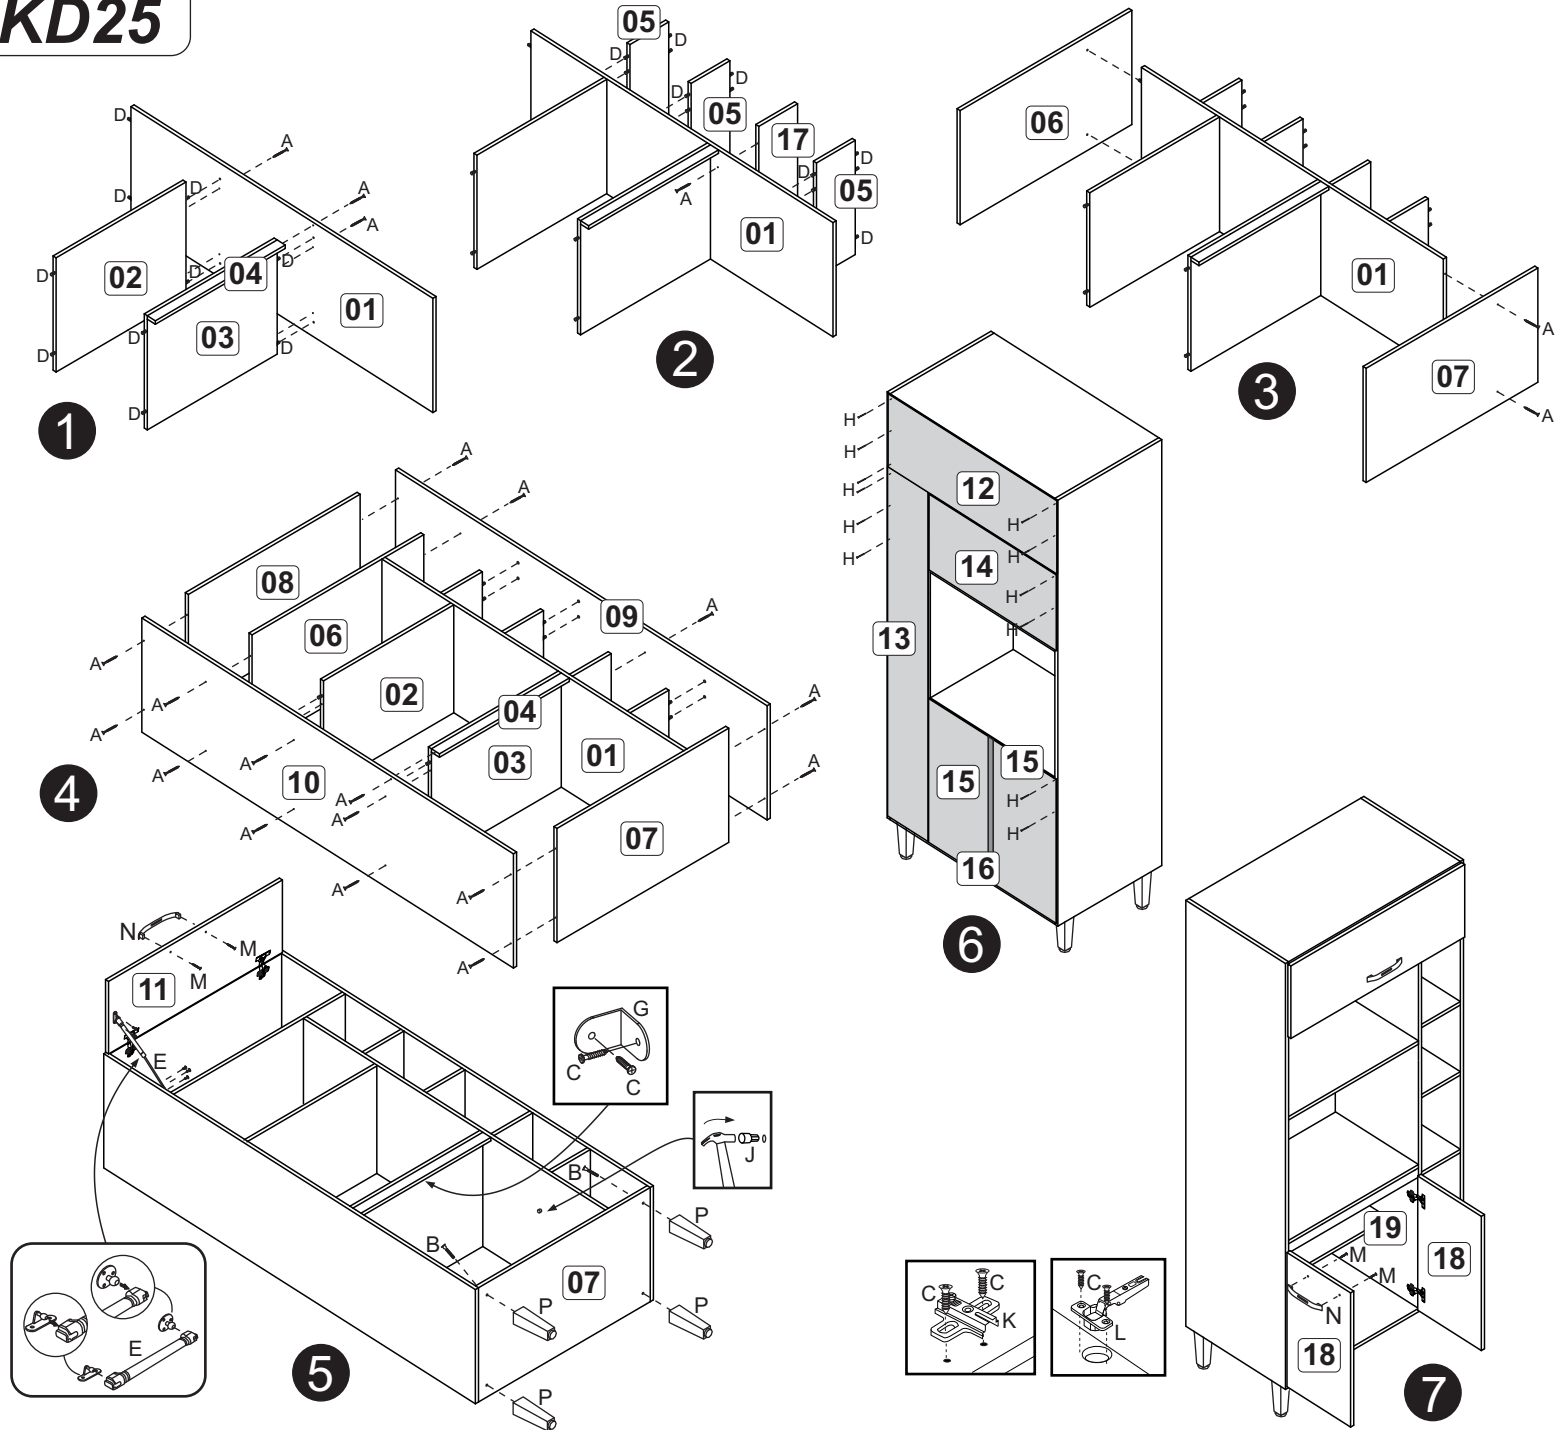






AR 33


ARMÁRIO TRIPLO SUPERIOR

WALL CABINET 3 DOOR


ARMARIO 3 PUERTAS

A		6x30	10
B		4,5x40	06
C			04
D		3,5x14	38
E		5,0x45	04
F		10x10	25
G			01
H		4,0x25	06
J			06
K			04
L			03
M	Cola/Glue		01
N			04


Obs.: Usar cola nas cavilhas
Usar cola en los tarugos
To use glue in the dowel

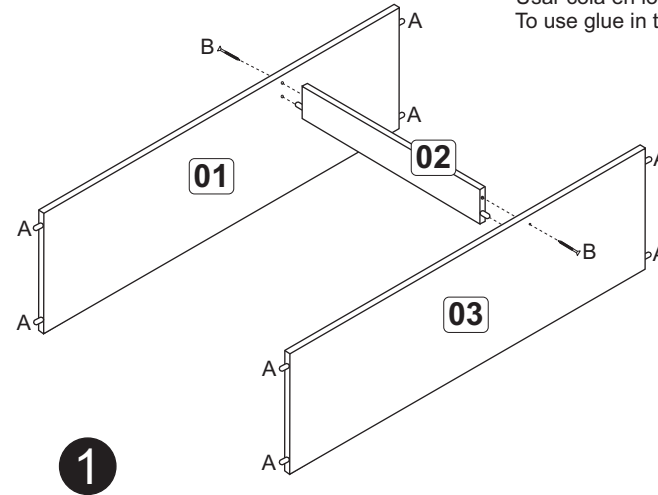


1

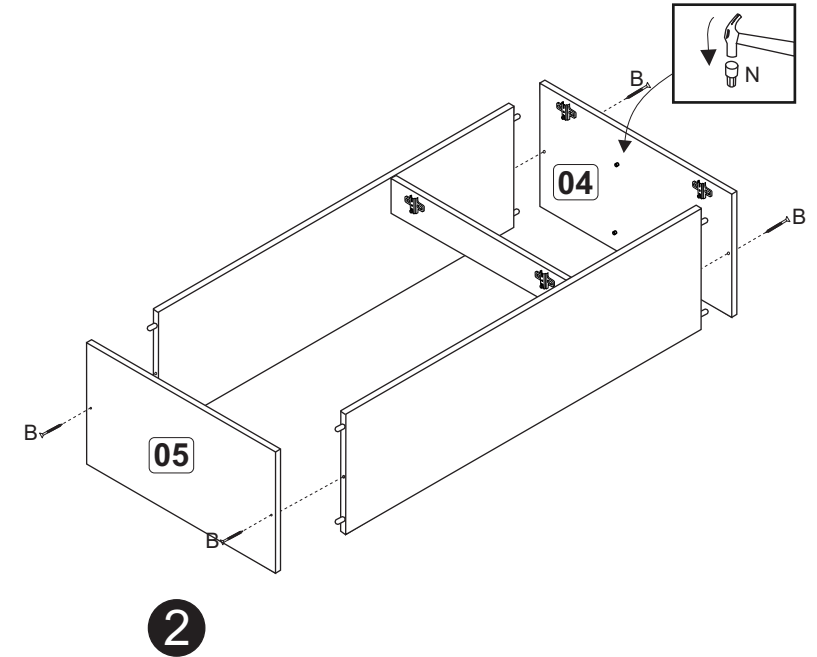


2

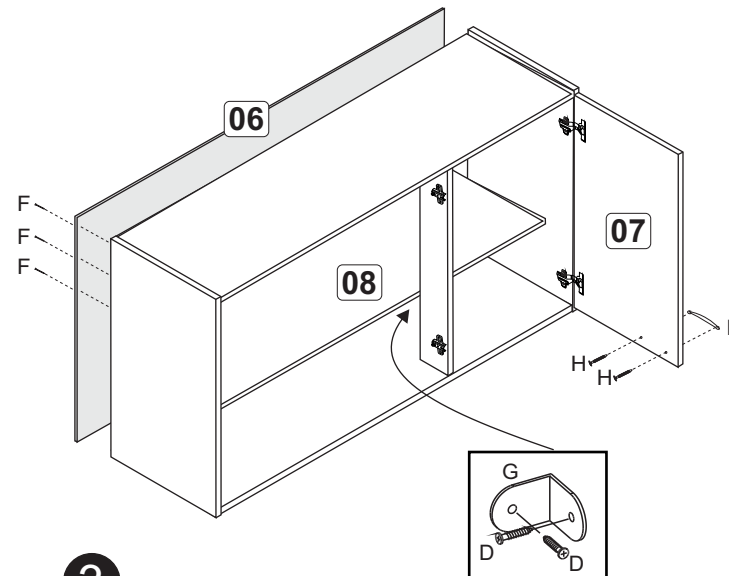

3

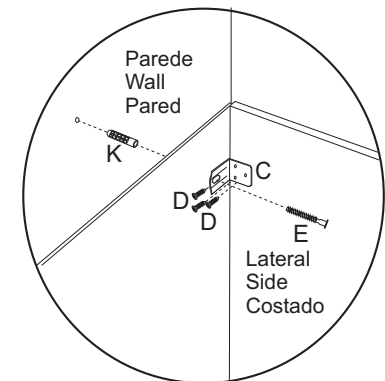










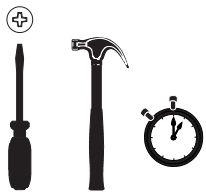



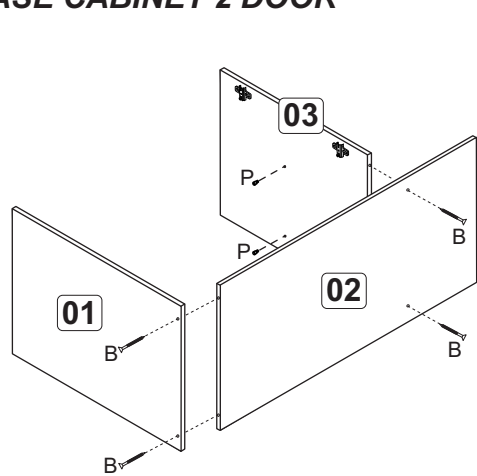
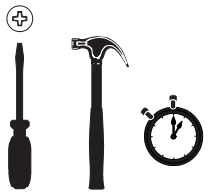
Fixação na parede
Fixed in the wall
Fijación en la pared




BP04

BALCÃO 2 PORTAS SEM TAMPO
BALCÓN 2 PUERTAS SIN TAPA
BASE CABINET 2 DOOR



A		12
B		10
C		08
D		62
E		03
F		55
G		05
H		10
J		04
K		05
L		05
M	Cola/Glue	01
N		12
P		04




1

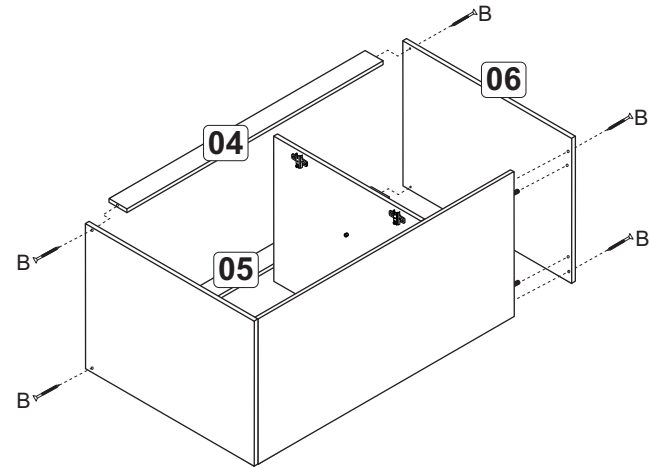

2

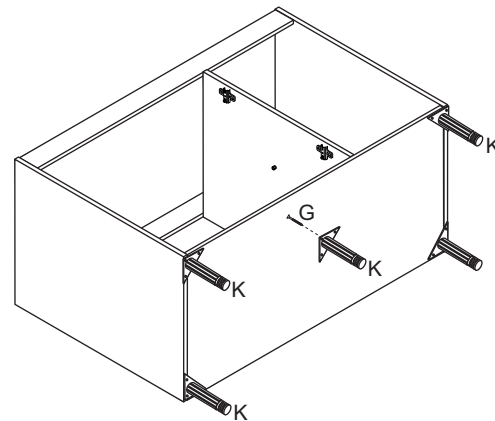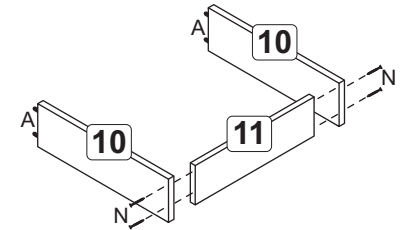









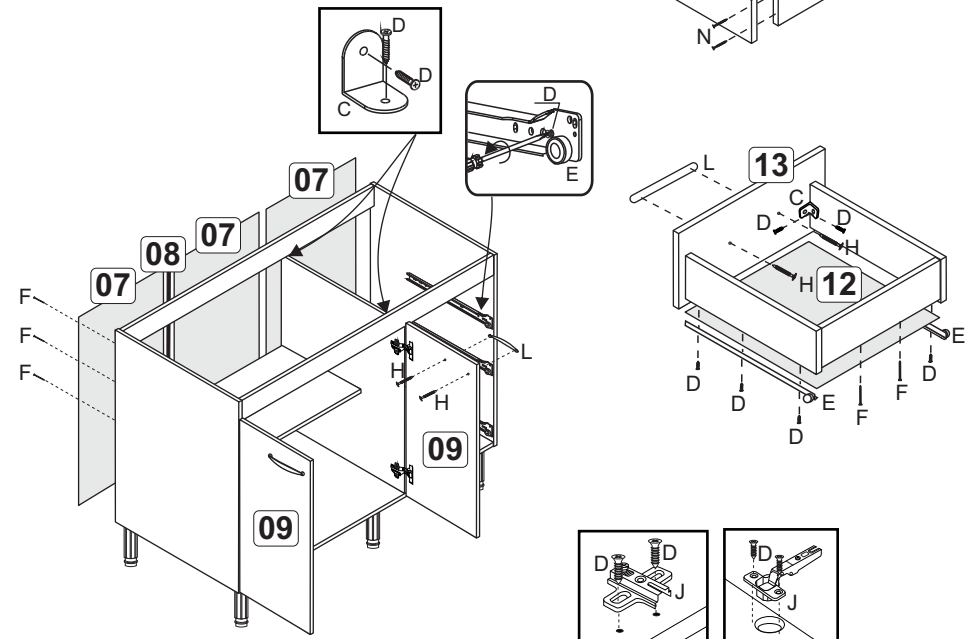
3



4

PA 23

PANELEIRO
ARMÁRIO PARA OLLAS
SIMPLE HIGH CABINET

A		12
B		12
C		60
D		04
E		02
F		03
G		08
H		01
I		04

