










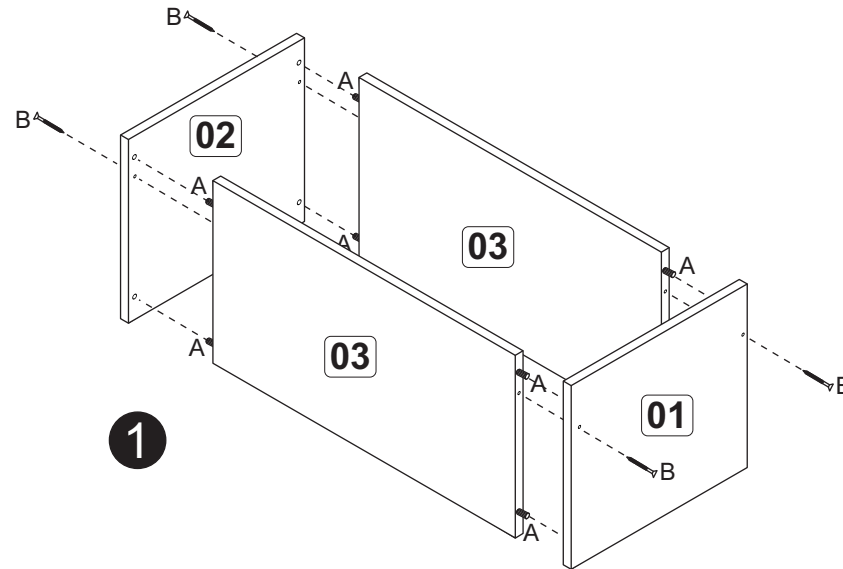
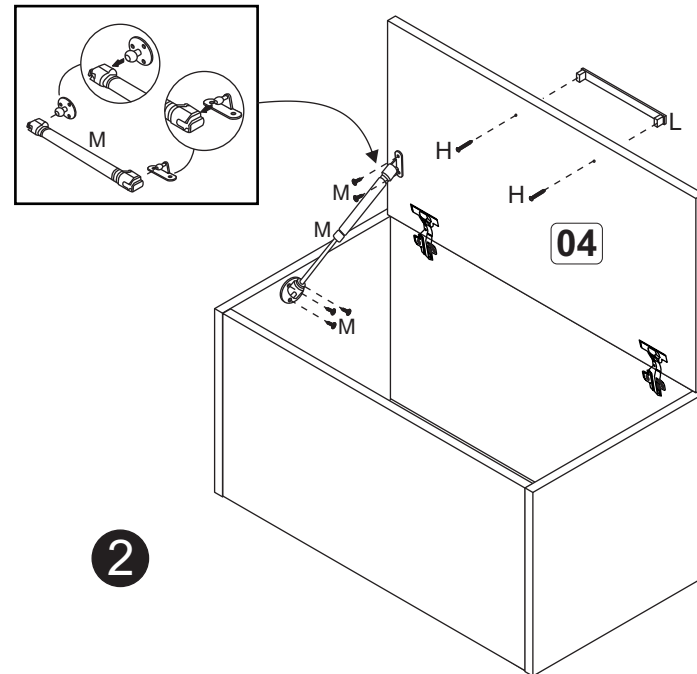



A		6x30	08
B		4,5x40	04
C			04
D			04
E		5,0 x 45	04
F		10x10	32
G		3,5x14	20
H		3,5x25	02
J	Cola		01
K			02
L			01
M			01






1



2

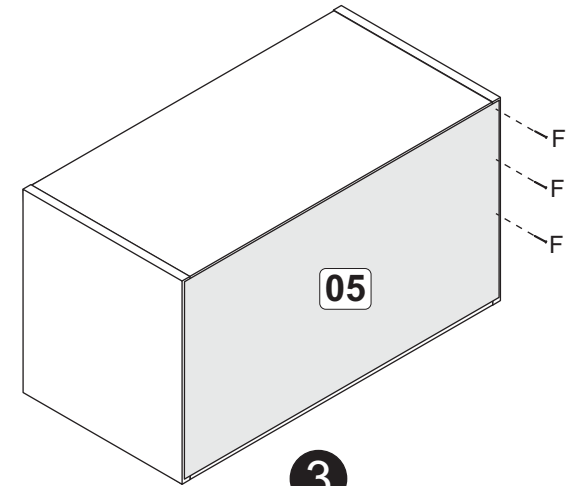

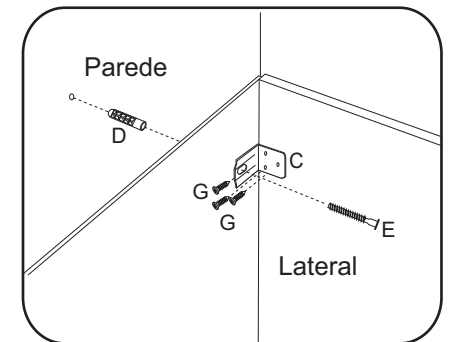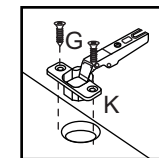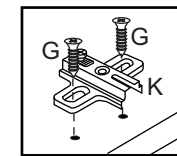












3









Fixação na parede












### KD 23 KIT

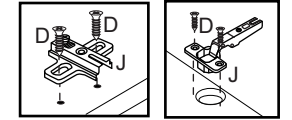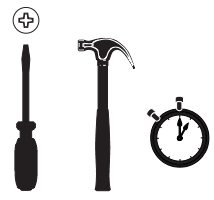
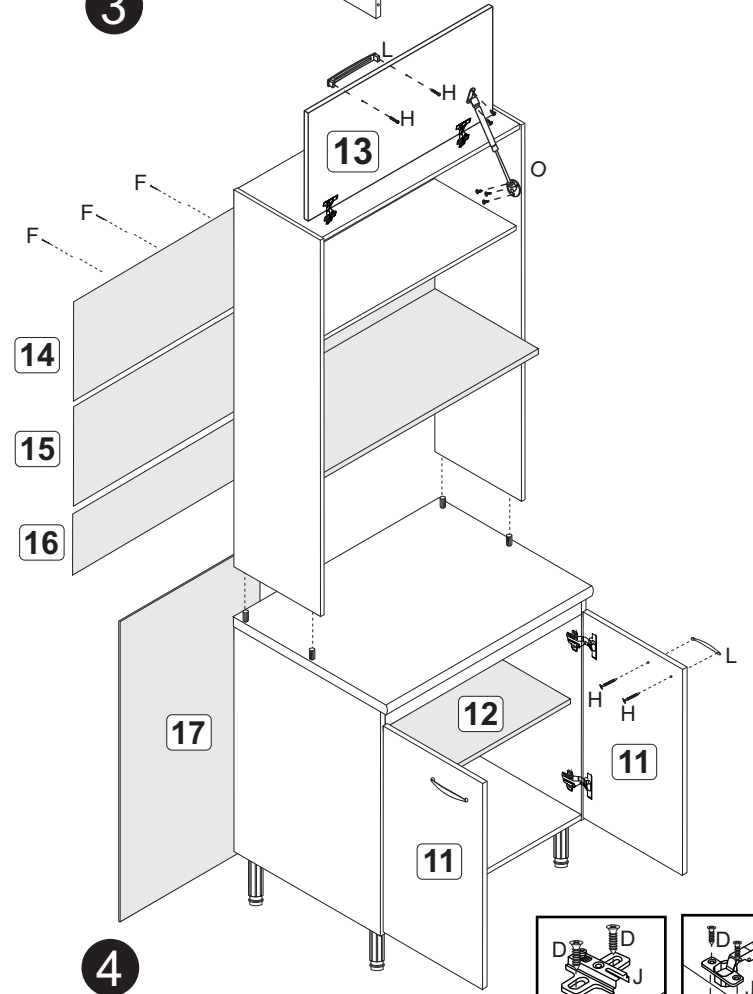
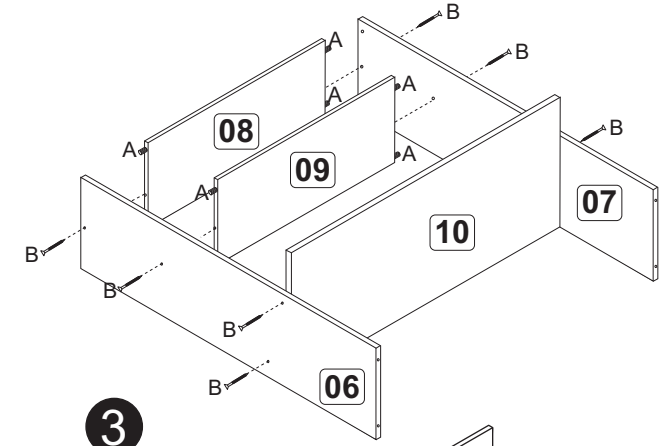
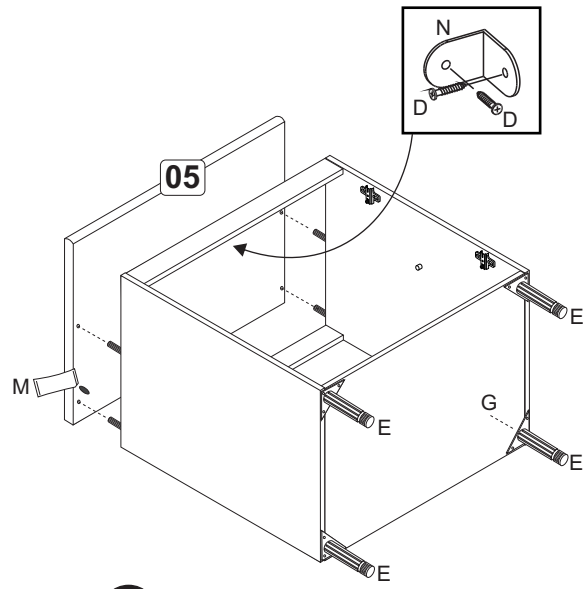
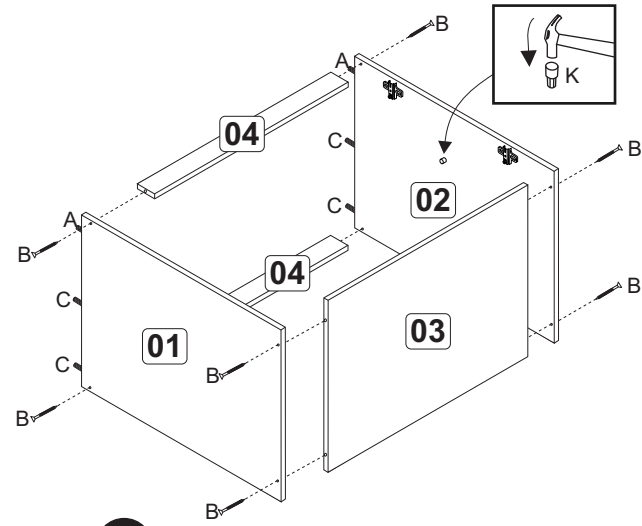
A		14
B		16
C		04
D		26
E		04
F		60
G		04
H		06
J		06
K		04
L		03
M	Cola/Glue	01
N		01
O		01



## PA 23

PANELEIRO  
ARMÁRIO PARA OLLAS  
SIMPLE HIGH CABINET

A		12
B		12
C		60
D		04
E		02
F		03
G		08
H		01
I		04

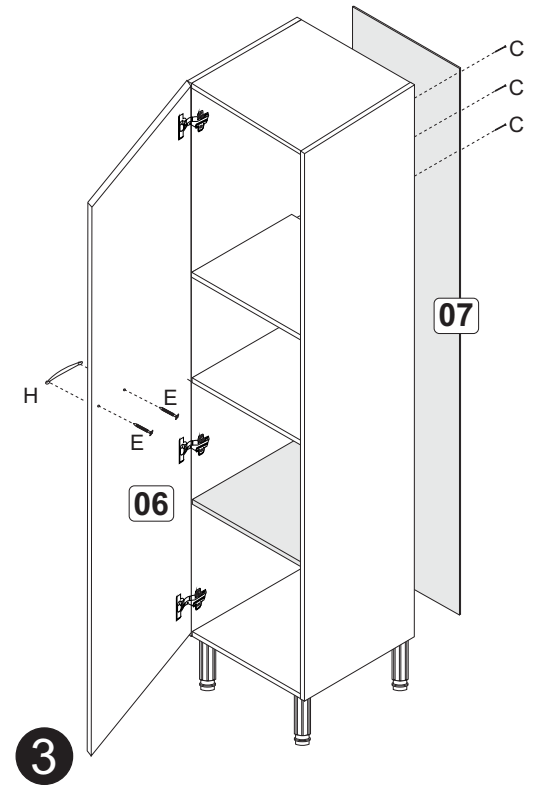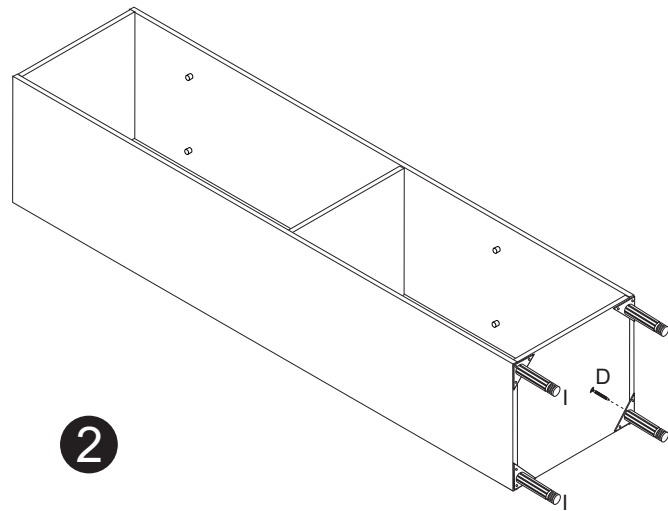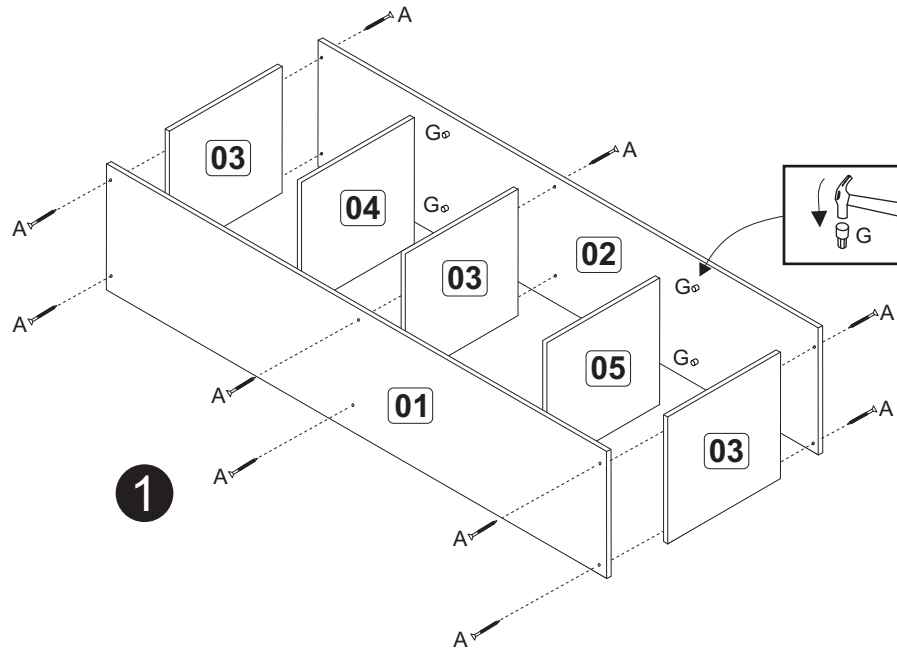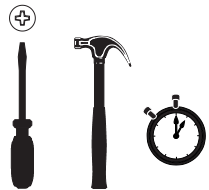













## AR 33





### ARMÁRIO TRIPLO SUPERIOR

### WALL CABINET 3 DOOR


### ARMARIO 3 PUERTAS

A		6x30	10
B		4,5x40	06
C			04
D		3,5x14	38
E		5,0x45	04
F		10x10	25
G			01
H		4,0x25	06
J			06
K			04
L			03
M	Cola/Glue		01
N			04

Obs.: Usar cola nas cavilhas  
Usar cola en los tarugos  
To use glue in the dowel

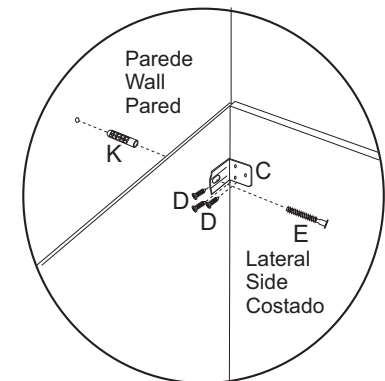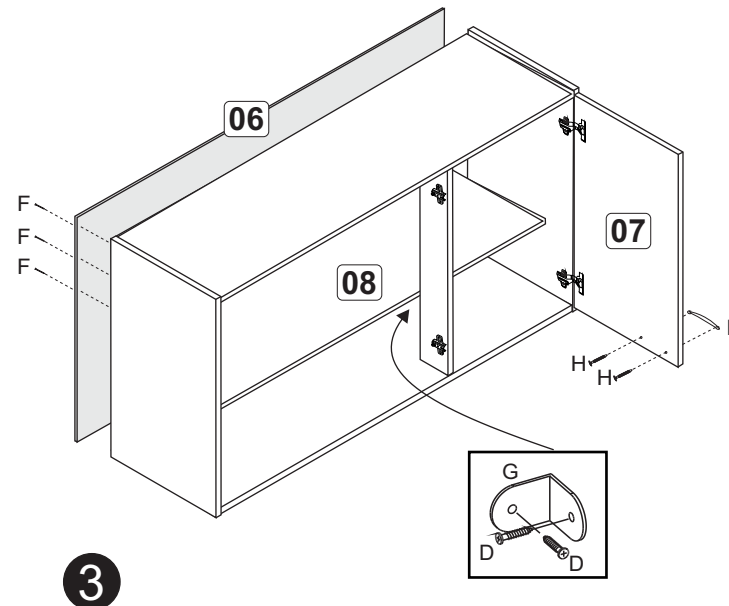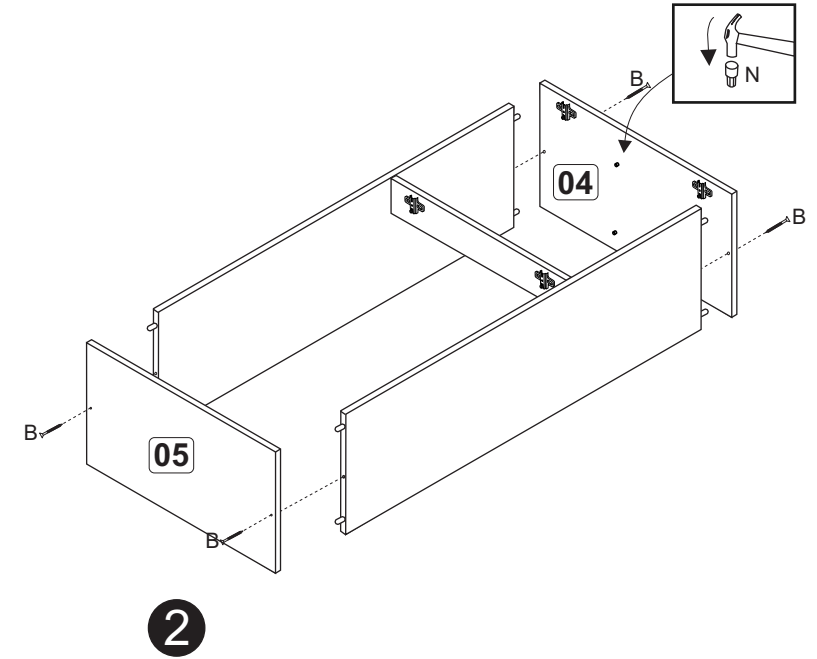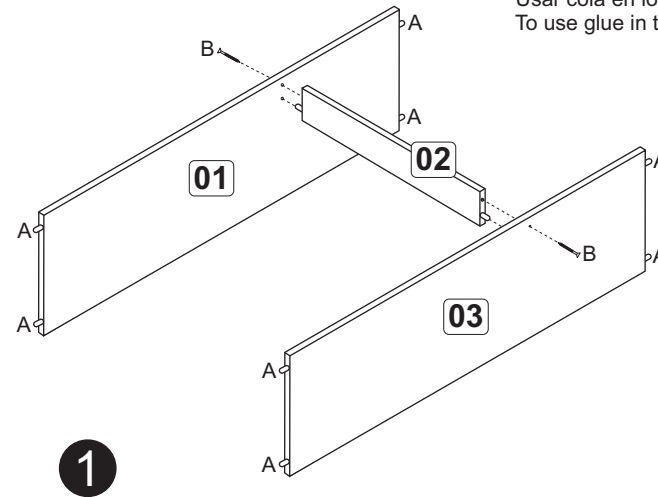








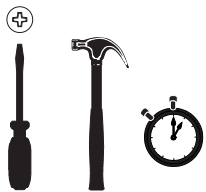







Fixação na parede  
Fixed in the wall  
Fijación en la pared




## BP04

BALCÃO 2 PORTAS SEM TAMPO  
BALCÓN 2 PUERTAS SIN TAPA  
BASE CABINET 2 DOOR



A		6x30	12
B		4,5x40	10
C			08
D		3,5x14	62
E			03
F		10x10	55
G		5,0x45	05
H		3,5x25	10
J			04
K			05
L			05
M	Cola/Glue		01
N		13x15	12
P			04

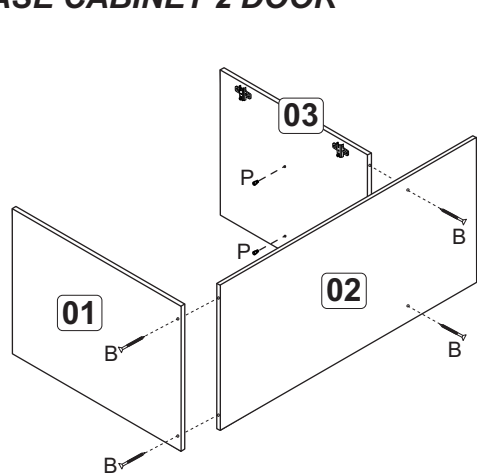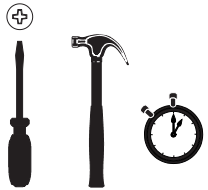


1

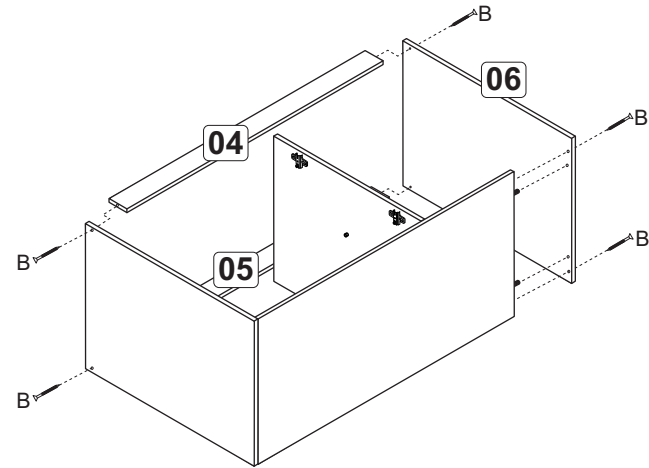

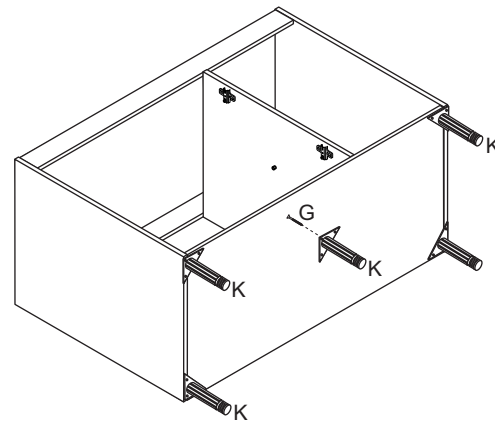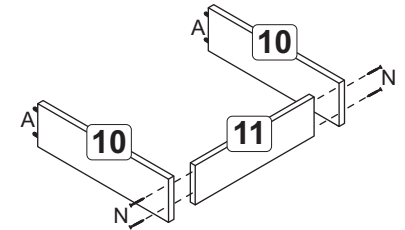









2

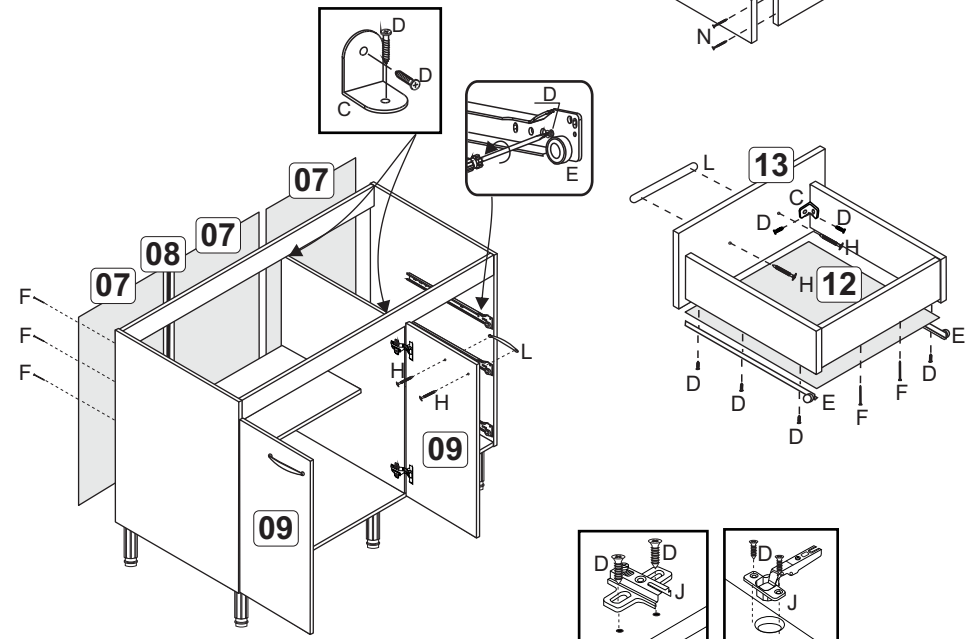

3



4

A		6x30	04
B		4,5x40	08
C	Cola/Glue		01
D		3,5x14	16
E			04
F		10x10	24
G		5,0x45	04
H		4,0x25	04
J			04
K			04
L			02

